



Illustrated Parts List Model Series 127800

TYPE NUMBERS 0100 through 3187.


TABLE OF CONTENTS

Alternator	8
Air Cleaner	4
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	8
Electrical	8
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	8
Fuel Supply	5
Governor Spring	5
Ignition	8
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	7
Valves	2



PRINTED IN U.S.A

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

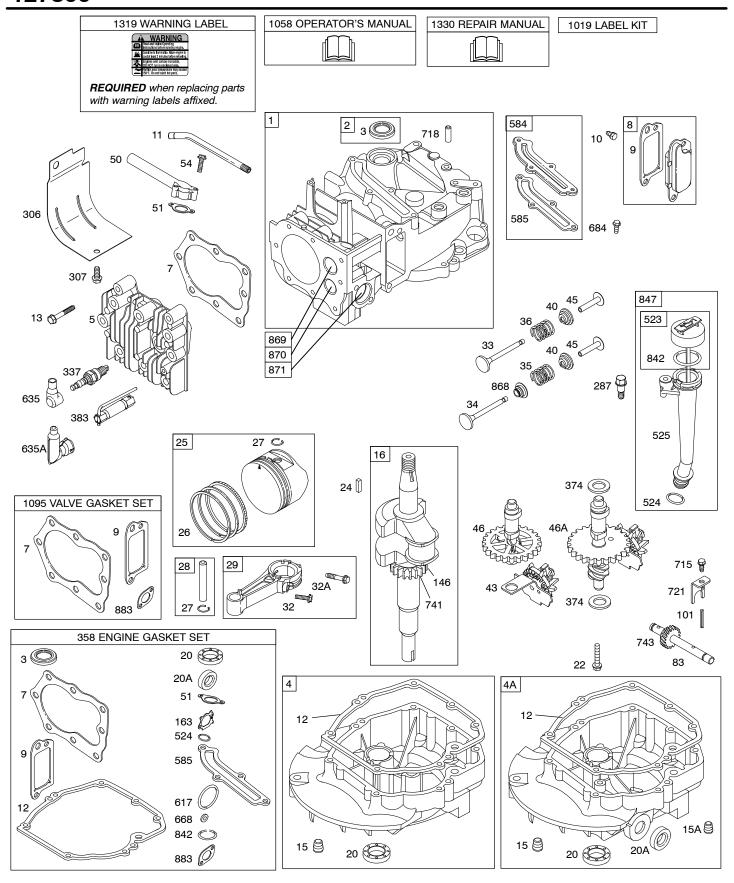



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


O519-2


Assemblies include all parts shown in frames.


O6/27/2008

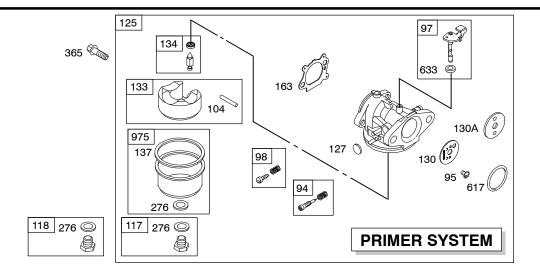


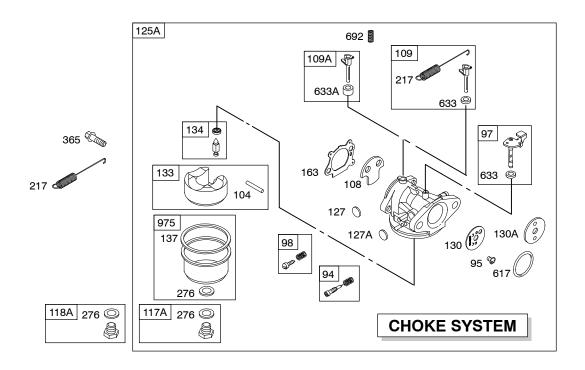


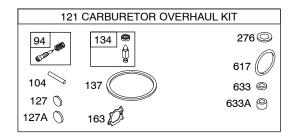





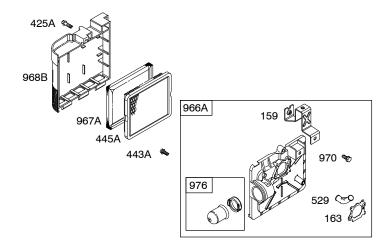


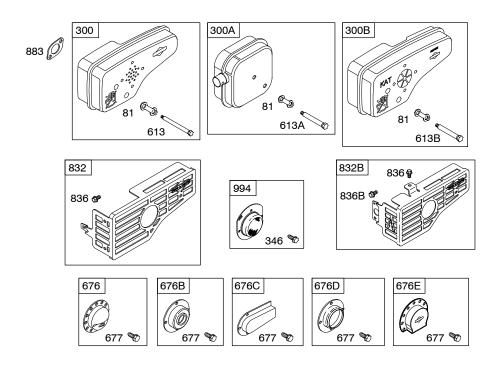


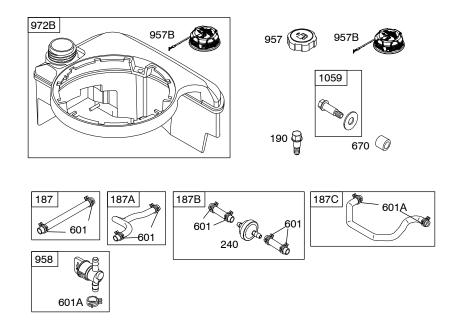


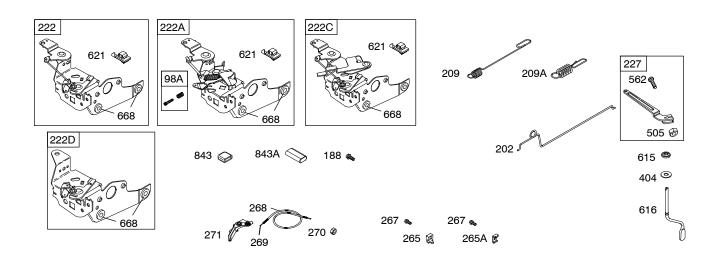


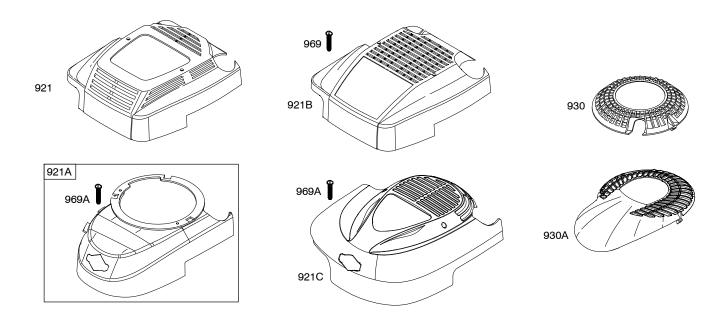


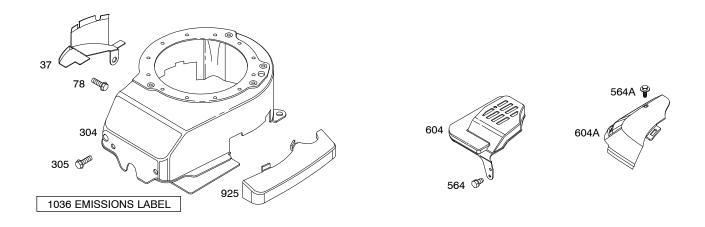

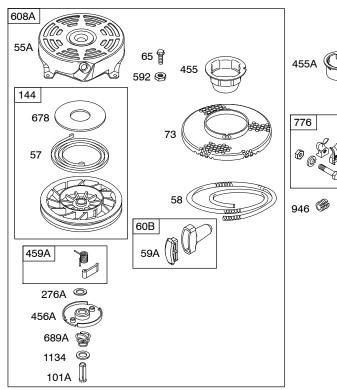

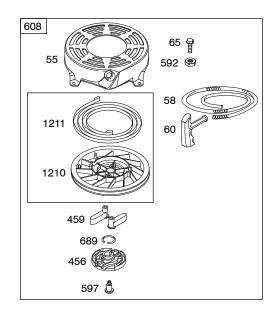

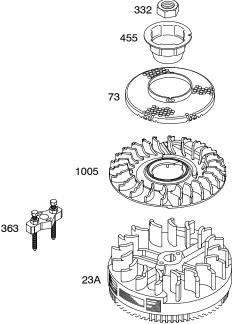

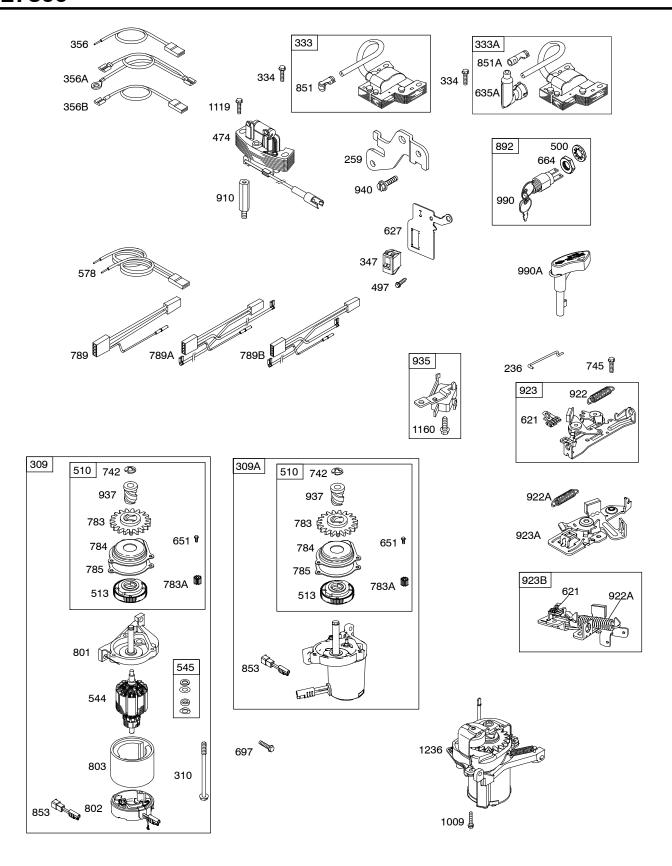

						127000
REF. PART NO. NO. [DESCRIPTION REF.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
4 493279 Sump 6962	Bushing/Seal -Oil 5 neto Side) 7 D-Engine 8 Note 9 94 Sump-Engine 10 I on Type No(s) 10	691160 ★∅692249 495786 ★∅699833	Sump-Engine (Auxiliary PTO) Head-Cylinder Gasket-Cylinder Head Breather Assembly Gasket-Breather Screw (Breather Assembly)	11 12 13 15 15A	+692232 690912 691680	Tube-Breather Gasket-Crankcase Screw (Cylinder Head) Plug-Oil Drain (Square Socket) Plug-Oil Drain (Hex Socket)

 [★] Included in Engine Gasket Set-Ref. No.358.
 ◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

 [◆] Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	691451	Crankshaft (Used After Code Date 97011200). Note 694442 Crankshaft (Used Before Code Date 97011300). 691450 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0600, 0808, 0830, 0843, 1108, 1111, 1112, 1113, 1145, 1146, 1167, 1312, 1531, 1533, 1534, 1536, 1538, 1700, 1908, 2308, 2631, 3112. 694440 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0100, 0208, 0408, 0600, 0808, 0830, 0843, 1108, 1111, 1112, 1113, 1531, 1533, 1536, 1538. 691452 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0811, 0812, 0821, 0826, 0829, 0838, 0839, 0850, 0861, 0866, 0880, 0883, 0890, 0892, 0897, 0898, 0899, 0900, 0902, 1114, 1137, 1139, 1140, 1149, 1150, 1162, 1166, 1168, 1176, 1191, 1366, 1376, 1378, 1386, 1566, 1572, 1765, 1766, 1912, 1914, 1927, 1929, 1952, 1966, 1969, 1972, 1973, 1995, 2004, 2006, 2007, 2009, 2366, 2667, 2668, 2676, 2681, 3110, 3125.			694059 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0415, 0811, 0812, 0821, 0826, 0829, 0838, 0839, 0850, 0861, 0866, 0890, 0892, 0897, 0898, 0899, 1114, 1137, 1139, 1140, 1162, 1166, 1176, 1191, 1366, 1376, 1378, 1386, 1566, 1572. 691454 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0822, 0823, 0835, 0864, 0891, 1133, 1364, 3165, 3175, 3176, 3177, 3178. 692000 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0822, 0823, 0835, 0864, 0891, 1133, 1364, 1375, 1377.			691455 Crankshaft (Used After Code Da 97011200). Used on Type No(s). 0820, 1953, 2319. 691375 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0820. 692980 Crankshaft (Used After Code Da 97011200). Used on Type No(s). 0611, 0612, 0640, 0650, 0651, 0653, 0849, 1739, 1740, 1741, 1751, 1742, 1761, 1763, 1949. 694443 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0611, 0612, 0640, 0650, 0651, 0849. 695242 Crankshaft Used on Type No(s). 1171, 1177. 694849 Crankshaft Used on Type No(s). 1916. 691482 Crankshaft Used on Type No(s). 1913.
		ine Gasket Set_Ref. No 3						asket Set_Ref_No_977

[★] Included in Engine Gasket Set-Ref. No.358.
◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

 [◆] Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

								127000
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	±399781S	Seal-Oil (PTO Side)	25	795429	Piston Assembly (Standard)	26	795431	Ring Set (Standard)
20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)			(Used After Code Date 07090300).			(Used After Code Date 07090300).
22	691092	, -			791097 Piston Assembly			791098 Ring Set (Standard)
23A	691987	Sump) Flywheel Note 691992 Flywheel Used on Type No(s).			(Used After Code Date 04031400 and Before Code Date 07090400). 499429 Piston Assembly			(Used After Code Date 04031400 and Before Code Date 07090400). 499425 Ring Set (Standard)
		0662, 0838, 0880, 0882, 0883, 0897, 0899, 0900, 1139, 1140, 1141, 1378, 1927, 1953, 2000, 2319. 696291 Flywheel Used on Type No(s).			(Standard) (Used After Code Date 97011200 and Before Code Date 04031500). 493262 Piston Assembly (Standard) (Used Before Code Date 97011300)			(Used After Code Date 97011200 and Before Code Date 04031500) 493261 Ring Set (Standard) (Used Before Code Date 97011300). 795432 Ring Set (020" Oversize)
24	222698S	3165. Key–Flywheel			Date 97011300). 795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300). 791326 Piston Assembly (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07040400). 499431 Piston Assembly (.020" Oversize) (Used After Code Date 97011200 and Before Code Date 04102200). 493386 Piston Assembly (.020" Oversize) (Used Before Code Date 97011300). 493387 Piston Assembly (.030" Oversize) (Used Before Code Date 97011300).			(.020" Oversize) (Used After Code Date 04102100). 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07090400). 499427 Ring Set (.020" Oversize) (Used After Code Date 97011200 and Before Code Date 04102200). 493389 Ring Set (.020" Oversize) (Used Before Code Date 97011300). 493390 Ring Set (.030" Oversize) (Used Before Code Date 97011300).

 [★] Included in Engine Gasket Set-Ref. No.358.
 ◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
27		Lock-Piston Pin (Used After Code Date	37 40	694086	Guard-Flywheel Retainer-Valve	57 58		Spring-Rewind Starter Rope-Starter
		97011200). Note	43		Slinger-Governor/Oil			(Cut To Required Length)
		691588 Lock-Piston Pin			691486 Slinger– Governor/Oil	59A 60		Insert-Grip Grip-Starter Rope
	100 100	(Used Before Code Date 97011300).			Used on Type No(s). 1913.	60B	393152	(Pistol Grip) Grip-Starter Rope
28	499423	Pin-Piston (Standard) (Used After Code Date	45 46		Tappet-Valve Camshaft	65	690837	(2 Piece) Screw
		97011200).			(Used After Code Date 96060200).	73	691222	(Rewind Starter) Screen-Rotating
		298909 Pin-Piston (Standard)			492830 Camshaft	78	691108	Screw (Flywheel Guard)
		(Used Before Code Date 97011300).	46A	601/150	(Used Before Code Date 96060300). Camshaft	81 83		Lock-Muffler Screw Shaft-Auxiliary Drive
		298908 Pin- Piston	70A	031403	(Counterclockwise) (Used After Code Date			Note 690522 Shaft-Auxiliary
		(.005" Oversize) (Used Before Code			96060200).			Drive Used on Type No(s).
29	499424	9			493738 Camshaft (Counterclockwise)			0811, 1112, 1113, 1536, 1538, 2673,
		(Standard) (Used After Code Date 97011200).			(Used Before Code Date 96060300).	94 95	●493765 691636	2674. Kit-Idle Mixture
		Note 490566 Rod-			Used on Type No(s). 0210, 0811, 0822,	97		(Throttle Valve) Shaft-Throttle
		Connecting (Standard)			0823, 0892, 0903, 1110, 1112, 1113,		430207	(Metal)
		(Used Before Code Date 97011300).			1139, 1140, 1142, 1375, 1377, 1570,			696565 Shaft-Throttle (Plastic)
32	691664	(Connecting Rod)			1571, 1581, 1591, 1883, 1884, 1959. 691460 Camshaft	98 98A		Kit-Idle Speed Kit-Idle Speed
32A	695759	(Connecting Rod) (Used After Code Date	50	497465	(Clockwise) Manifold-Intake	101 101A	691623	Pin-Shaft Pin-Shaft
33	262651S	00042200). Valve–Exhaust	51 54	★272199S 691650	Gasket-Intake Screw	104 108		Pin-Float Hinge Valve-Choke
34 35		Valve-Intake Spring-Valve	55	691421	(Intake Manifold) Housing-Rewind	109 109A		Shaft-Choke Shaft-Choke
36	691270	(Intake) Spring-Valve	55A	492831	Starter Housing-Rewind			
I		(Exhaust)			Starter			

[★] Included in Engine Gasket Set-Ref. No.358.
◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

 [◆] Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

								127000
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
NO. 117 49	NO.	DESCRIPTION Jet-Main (Standard) (Used After Code Date 96060200).		NO.	DESCRIPTION Jet-Main (High Altitude) (Used After Code Date 96060200). Note 496495 Jet-Main (High Altitude) (Used After Code Date 95102900 and Before Code Date 96060300). 497348 Jet-Main (High Altitude) (Used Before Code Date 95103000). 494870 Jet-Main (High Altitude) (Used Before Code Date 94070400). Used on Type No(s). 0611, 0612. Jet-Main (High Altitude) (Used After Code Date 96060200) Note 496063 Jet-Main (High Altitude) (Used Before Code Date 96060300). 498975 Jet-Main (High Altitude) Used on Type No(s). 1913, 1953, 2319. 494870 Jet-Main (High Altitude) Used on Type No(s). 1916.		NO. 498260 498170 498965	

[★] Included in Engine Gasket Set-Ref. No.358.
◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

 [◆] Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
130 130A		Valve-Throttle Valve-Throttle	209	691292	Spring-Governor	209A	691835	Spring-Governor
133		Float-Carburetor			699056 Spring-			
		Kit-Needle/Seat			Governor			691834 Spring-
					Used on Type No(s).			Governor
		Gasket-Float Bowl			0600, 0650, 0808,			Used on Type No(s).
144	493824	Pulley/Spring			0829, 0837, 0839,			1167, 1146.
		Assembly						691832 Spring-
146		Key-Timing			1109, 1110, 1700,			Governor
159	691753	Bracket-Air Cleaner			1761, 1901, 1908,			Used on Type No(s).
		Primer			1929, 1953, 1992,			0880, 0897.
163⋆•	• ♦272653	Gasket-Air Cleaner			1994, 1995, 2309,			690569 Spring-
187	791766	Line-Fuel			2319.			Governor
		(Cut to Required			691864 Spring-			Used on Type No(s).
		Length)			Governor			• • • • • • •
187A	791873	Line-Fuel			Used on Type No(s).			1171, 1177.
.077	701070	(Molded)			1913.			690568 Spring-
187B	701201	Line-Fuel			691852 Spring-			Governor
107 D	791091	(Includes Filter)			Governor			Used on Type No(s).
					Used on Type No(s).			1145.
		(Used After Code Date			1914, 1766, 1887,			262663 Spring-
		05063000).			1971, 1972, 2008,			Governor
		Note			2009, 2367, 2680,			Used on Type No(s).
		692042 Line-Fuel			2681, 2673, 2674.			0667, 1593.
		(Includes Filter)			691851 Spring-			0007, 1393.
		(Used Before Code			Governor			
		Date 05070100).			Used on Type No(s).			
187C	791875	Line-Fuel			0830, 0841, 0843,			
		(Molded)			0848, 0893, 1130,			
188	690877	` '			1312, 1387, 1530,			
	•	(Control Bracket)			1531, 1916, 1948,			
190	690940	` '			2631, 3112, 3187.			
.50	555570	(Fuel Tank)						
202	601920	Link-Mechanical			691291 Spring– Governor			
202	091029	Governor						
		Governor			Used on Type No(s).			
					2007, 2006.			
						1		
						1		

 [★] Included in Engine Gasket Set-Ref. No.358.
 ◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

 [◆] Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

						1		127000
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
217	690354	Spring-Choke Return	270	691027	Nut	305	691108	Screw
222		Bracket-Control	287	690940	Screw			(Blower Housing)
		(Remote/Manual			(Dipstick Tube)	306	690450	Shield-Cylinder
		Friction) (Primer)	300	496106S		307	690345	,
222A	692021	Bracket-Control			(Tuned)			(Cylinder Shield)
		(Remote Choke A	300A	494343S		309	695550	Motor-Starter
		Matic, Non Com-			(Square Lo Tone)			(Used Before Code
		pliance)	300B	497681	Muffler			Date 07052900).
222C	692150	Bracket-Control			(Catalyst)	309A	795092	Motor-Starter
		(Remote/Manual	304	493293	Housing-Blower			(Used After Code Date
		Friction) (Variable			Note			07052800).
		Speed And 5 Position			696298 Housing-	310	692327	
l		Manual Choke)			Blower			(Starter Motor)
222D	692467	Bracket-Control			Used on Type No(s).	332	690662	
		(Remote/Manual			3165.		000574	(Flywheel)
		Friction) (Variable			695892 Housing-	333		Armature–Magneto
		Speed And 5 Position Manual Choke Without			Blower Used on Type No(s).	333A	792640	Armature-Magneto (Screw On Spark Plug
		Stopswitch)			1901, 1908, 1992,			Boot)
227	690783	Lever-Governor			1994, 1995.			Note
221	090703	Control			493294 Housing-			793353 Armature–
236	691826	Link-Lockout			Blower			Magneto
240		Filter-Fuel			Used on Type No(s).			(Snap In Spark Plug
259		Bracket-Casing Clamp			0513, 0662, 0817,			Boot)
265		Clamp-Casing			0821, 0829, 0830,	334	691061	Screw
265A		Clamp-Casing			0838, 0841, 0843,			(Magneto Armature)
267	691044	Screw			0848, 0880, 0882,	337	802592S	Plug-Spark
		(Casing Clamp)			0883, 0893, 0897,	346	690661	
268	691025	Casing-Control Wire			0899, 0900, 0903,			(Spark Arrestor)
		(Cut to Required			1130, 1138, 1139,	347		Switch-Rocker
		Length)			1140, 1141, 1168,	356		Wire-Stop
269	691026	Wire-Control			1190, 1193, 1312,	356A		Wire-Stop
		(Cut to Required			1378, 1387, 1530,	356B		Wire-Stop
270	691027	Length)			1531, 1913, 1916,	358 363		Gasket Set-Engine Flywheel Puller
270	091027	(Control Wire Casing)			1927, 1929, 1948, 1952, 1953, 1969,	365	691688	,
271	691028	Lever-Control			2006, 2007, 2319,	303	091000	(Carburetor)
		Washer-Sealing			2631, 3110, 3112,	374	691074	Washer
276A		Washer-Sealing			3187.			(Camshaft)
		Truee. Comming						(Camilland)
						<u> </u>		

 [★] Included in Engine Gasket Set-Ref. No.358.
 ◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
383	89838S	Wrench-Spark Plug	578	398153	Wire Assembly	651	691660	Screw
404	690272		584		Cover-Breather			(Starter Gear Cover)
	0002.2	(Governor Crank)			Passage	664	691087	` '
425A	690670		585	+601870	Gasket-Breather		001007	(Key Switch)
7207	030070	(Air Cleaner Cover)	363	×091079		668	* 493823	
443A	692523	`	500	600000	Passage	000	×493623	•
4434	092323	(Air Cleaner Primer	592	690800		670	600004	(Includes 2)
		Base)			(Rewind Starter)	670		Spacer-Fuel Tank
4454	401E00C	,	597	691696		676	396548	Deflector-Muffler
445A	4913883	Filter-Air Cleaner			(Pawl Friction Plate)			(Single Louver)
	=0.4.0.00	Cartridge	601		Clamp-Hose	676B	397931	Deflector-Muffler
455		Cup-Flywheel	601A	691038	Clamp-Hose			(Direct Out)
455A		Cup-Flywheel	604	691757	Cover-Control			(3/4" Diameter)
456		Plate-Pawl Friction	604A	691344	Cover-Control	676C	493871	Deflector-Muffler
456A		Plate-Pawl Friction	608	497680	Starter-Rewind			(Side Out)
459		Pawl-Rachet	608A	497598	Starter-Rewind			(Extended)
459A	492833	Pawl-Ratchet	613	691340				(17/32" Deep)
474	691991	Alternator			(Muffler)	676D	497682	Deflector-Muffler
497	690664	Screw	613A	691653	` ′	0,00	43700E	(Direct Out)
		(Stopswitch Bracket)	UISA	091000	(Muffler)			(1 3/16" Diameter)
500	691086	Washer	C40D	604444	` '	676	000760	,
		(Key Switch)	613B	691114		676E	393760	Deflector-Muffler
505	691251	` ,			(Muffler)			(Side Out)
		(Governor Control	615	690340	Retainer-Governor			(7/16" Deep)
		Lever)			Shaft	677	690661	
510	795093	Drive-Starter	616		Crank-Governor			(Muffler Deflector)
513		Drive-Clutch	617●	◆270344 S	Seal-O Ring	678	224278	Spacer-Rewind
523		Dipstick			(Intake Manifold)	684	690345	Screw
524		Seal-Dipstick Tube	621	692310	Switch-Stop			(Breather Passage
525		Tube-Dipstick	627	692872	Bracket-Stop Switch			Cover)
529		Grommet	633 ●		Seal-Choke/Throttle	689	691855	Spring-Friction
544		Armature-Starter			Shaft	689A		Spring-Friction
			633∆ ●	♦ 693867	Seal-Choke/Throttle	692		Spring-Detent
545	492919	Washer Set	JOOA	* 000007	Shaft	697	691127	
	00010	(Motor Starter)	635	665399	Boot-Spark Plug	031	091127	(Drive Cap)
562	92613		635A			715	601147	` ',
		(Governor Control	035A	192591	Boot-Spark Plug	715	691147	
		Lever)			(Screw On Style)			(Stop Shaft)
564	690664				Note	718		Pin-Locating
		(Control Cover)			793351 Boot-Spark	721	690449	Stop-Shaft
564A	691142				Plug			
		(Control Cover)			(Snap On Style)			

[★] Included in Engine Gasket Set-Ref. No.358.
◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

 [◆] Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

								127000
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
741	795755	Gear-Timing	802	695267	Cap-End	871	262001	Bushing-Valve Guide
		(Plastic)			(Used After Code Date			(Exhaust)
		794388 Gear–Timing			00040600). Note			63709 Bushing–Valve
		(Use Without Woodruff			695975 Cap-End			Guide Guide
		Key)			(Used Before Code			(Intake)
		(Used After Code Date			Date 00040700).	883 *	Ø691881	Gasket-Exhaust
		07093000).	803	695266	Housing-Starter	892		Switch-Key
		790345 Gear–Timing			(Used After Code Date	910	691094	Stud
		(Use Without Woodruff			00040600).			(Alternator)
		Key)			Note	921		Cover-Blower Housing
		(Used Before Code			695975 Housing-	921A		Cover-Blower Housing
		Date 07100100). 691830 Gear–Timing			Starter	921B		Cover–Blower Housing
		(Uses Woodruff Key)			(Used Before Code	921C		Cover–Blower Housing
742	93941	Retainer-E Ring	000	400004	Date 00040700).	922		Spring-Brake
743		Gear-Drive	832	499034	Guard-Muffler	922A 923	692135 691994	Spring-Brake
745	691648	Screw			(Used With Super Lo Tone Muffler Tuned)	923 923A	695891	
		(Brake)	832B	497683	Guard-Muffler	320A	093091	Note
776		Guide-Rope			(Used With Super Lo			695891 Brake
783	691918	Gear-Pinion			Tone Catalyst Muffler)			(Used Before Code
		(Starter Drive)	836	690664	-			Date 08050100).
783A	601260	(19 Teeth) Gear-Pinion			(Muffler Guard)			Used on Type No(s).
103A	091209	(12 Teeth)	836B	691147	Screw			1908.
784	795095	Cover-Starter Gear			(Muffler Guard)	923B	796136	Brake
785		Gasket-Starter Cover	842	★ 691031	Seal-O Ring			(Used After Code Date
789	695551	Harness-Wiring			(Dipstick Tube)			08043000).
		(Used After Code Date	843	691884	Sleeve-Lever			Used on Type No(s).
		00040600).	0404	601005	(Speed Control)	005	70E402	1908.
		Note	843A	091693	Sleeve-Lever (Choke)	925	795403	Cover-Linkage (Used After Code Date
		690790 Harness-	847	692047	Dipstick/Tube			07072200).
		Wiring (Used Before Code	547	002041	Assembly			Note
		Date 00040700).	851	493880S	Terminal-Spark Plug			690595 Cover–
789A	691372	Harness-Wiring	851A		Terminal-Spark Plug			Linkage
		(Used Before Code	853	695268	Adapter-Wire			(Used Before Code
		Date 00040700).	868	697338	Seal-Valve			Date 07072300).
789B	696547	Harness-Wiring	869	691155	Seat-Valve	930	691919	Guard-Rewind
		(Used After Code Date			(Intake)		001015	(Round) (Satin Black)
001	600700	00040600).	870	690380	Seat-Valve	930A	691345	Guard-Rewind
801	690782	Cap-Drive			(Exhaust)			(Teardrop)(Satin Black)
		ing Cooket Cot. Dof. No. 0	l			<u> </u>		acket Cet. Def. No. 077

 [★] Included in Engine Gasket Set-Ref. No.358.
 ◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

 [◆] Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

	DADT		DEE	DADT	1	DE-	DART	
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
935		Switch-Interlock	972B	699374	Tank-Fuel	1059	692311	Kit-Screw/Washer
937		Spline-Starter			(Plastic)			Note
940	690664				Note			696293 Kit-Screw/
		(Casing Clamp			699387 Tank-Fuel			Washer
		Bracket)			(Plastic)			Used on Type No(s).
946		Stop-Rope			Used on Type No(s).			3165.
957	397974S	Cap-Fuel Tank		400040	3165.	1095		Gasket Set-Valve
0570	600005	(Plastic)	975		Bowl-Float	1119	691648	
957B	699985	Cap-Fuel Tank	976		Primer-Carburetor	1104	004000	(Alternator)
958	600102	(Plastic) Valve-Fuel Shut Off	977 990		Gasket Set-Carburetor Key Set	1134	224322	Washer
956	090103	(Plastic)	990A		Key Set	1160	690345	(Pawl Friction Plate)
966A	496116	Base-Air Cleaner	994		Arrestor-Spark	1100	030043	(Interlock Switch)
JOOA	430110	Primer	1009	696255		1210	498144	Pulley/Spring
967A	493537S	Filter-Pre Cleaner	1000	000200	(Starter Motor)	1210	450144	Assembly
968B		Cover-Air Cleaner	1005	691346	Fan-Flywheel			(Pulley)
969	690700		1019		Kit-Label	1211	498144	Pulley/Spring
		(Blower Housing			Note			Assembly
		Cover)			790231 Kit-Label			(Spring)
969A	691138				(Touch N Mow)	1236	695959	Starter-Mechanical
		(Blower Housing	1036		Label-Emissions			(Touch N Mow)
		Cover)			(Available From A			(Do Not Service
970	691669				Briggs & Statton			Individual Parts, Only
		(Air Cleaner Primer			Authorized Dealer)			As A Whole)
		Bracket)	1058	277039	Operator's Manual	1319		Label-Warning
						1330	270962	Manual-Repair
L								

[★] Included in Engine Gasket Set-Ref. No.358.
◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

 [◆] Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.